 


# Service Manual



**Model #: VO370M\_LGD  
\_LC370WUE-SBA1-6R1  
(T37USVZB1RF-.VO370M1)**

**AMTRAN TECHNOLOGY CO., LTD.**

**17F, NO. 268, Lien Chen Rd., Chung Ho City Taipei County, Taiwan, 235 R.O.C.**

**TEL : (02) 8228-0505      FAX : (02) 8228-0599**

***Confidential Document, Property of AmTRAN CO. LTD***

## Table of Contents

CONTENTS	PAGE
----------	------

### *Sections*

<b>1. Features</b>	<b>1-1</b>
<b>2. Specifications</b>	<b>2-1</b>
<b>3. On Screen Display</b>	<b>3-1</b>
<b>4. Factory Preset Timings</b>	<b>4-1</b>
<b>5. Pin Assignment</b>	<b>5-1</b>
<b>6. Main Board I/O Connections</b>	<b>6-1</b>
<b>7. Theory of Circuit Operation</b>	<b>7-1</b>
<b>8. Waveforms</b>	<b>8-1</b>
<b>9. Trouble Shooting</b>	<b>9-1</b>
<b>10. Block Diagram</b>	<b>10-1</b>
<b>11. Spare parts list</b>	<b>11-1</b>
<b>12. Complete Parts List</b>	<b>12-1</b>

### *Appendix*

1. Main Board Circuit Diagram
2. Main Board PCB Layout
3. Assembly Explosion Drawing

COPYRIGHT © 2000 **V, INC.** ALL RIGHTS RESERVED.

IBM and IBM products are registered trademarks of International Business Machines Corporation.

Macintosh and Power Macintosh are registered trademarks of Apple Computer, Inc.

VINC and VINC products are registered trademarks of V, Inc.

VESA, EDID, DPMS and DDC are registered trademarks of Video Electronics Standards Association (VESA).

Energy Star is a registered trademark of the US Environmental Protection Agency (EPA).

No part of this document may be copied, reproduced or transmitted by any means for any purpose without prior written permission from VINC.

## FCC INFORMATION

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause unacceptable interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures -- reorient or relocate the receiving antenna; increase the separation between equipment and receiver; or connect the into an outlet on a circuit different from that to which the receiver is connected.

## FCC WARNING

To assure continued FCC compliance, the user must use a grounded power supply cord and the provided shielded video interface cable with bonded ferrite cores. Also, any unauthorized changes or modifications to Amtrak products will void the user's authority to operate this device. Thus VINC Will not be held responsible for the product and its safety.

## CE CERTIFICATION

This device complies with the requirements of the EEC directive 89/336/EEC with regard to "Electromagnetic compatibility."

## SAFETY CAUTION

Use a power cable that is properly grounded. Always use the AC cords as follows – USA (UL); Canada (CSA); Germany (VDE); Switzerland (SEV); Britain (BASEC/BS); Japan (Electric Appliance Control Act); or an AC cord that meets the local safety standards.

# Chapter 1 Features

---

1. Built in TV channel selector for TV viewing.
2. Color Depth 8 bit (D).
3. Connectable to PC's analog RGB port.
4. Built in S-video, HDTV, composite video, HDMI and TV out.
5. Built in auto adjust function for automatic adjustment of screen display.
6. Smoothing function enables display of smooth texts and graphics even if image with resolution lower than 1920(H) x1080 (V) is magnified.
7. Power saving to reduce consumption power too less than 0.5W.
8. On Screen Display: user can define display mode (i.e. color, brightness, contrast, sharpness, and backlight), sound setting, TV channel program, aspect and gamma or reset all setting.

# Chapter 2 Specification

---

## 1. General Description

<b>Model No.</b>	VO370M
<b>Product Name</b>	VIZIO VO370M
<b>Panel</b>	RAKEN LC370WUE_SBA1
<b>Display Pixels</b>	1920 (H) x 1080 (V) pixels
<b>Active Display Area (mm)</b>	819.36 (H) x 460.89 (V)
<b>Aspect Ratio</b>	16:9
<b>Color Depth</b>	8 bit(D)
<b>Luminance of White (cd/m<sup>2</sup>) (Typical, Panel Spec.)</b>	LC370WUE_SBA1 500
<b>Contrast Ratio</b>	LC370WUE_SBA1 1400:1
<b>TV system</b>	NTSC/ATSC/QAM
<b>PC Inputs</b>	15pins D-Sub
<b>Video Inputs</b>	1x RF (Combo, F Connector for internal NTSC/ATSC/QAM Tuner) 3x HDMI with HDCP plus Stereo Analog Audio 2x Component YPbPr plus Stereo Audio 2x Composite Video plus Stereo Audio 1x S-Video plus Stereo Audio 1x Analog RGB plus Stereo Audio USB firmware update
<b>Audio Inputs</b>	1x Stereo Audio (RCA) 1x PC mini jack
<b>Audio Outputs</b>	1x SPDIF Digital Audio (Optical) 1x Stereo Analog Audio
<b>Service Port</b>	USB service port
<b>Audio Speaker</b>	10W X 2
<b>Power Input</b>	100~240Vac at 50/60 Hz
<b>Power Consumption</b>	Max 178 /Avg. 126 W, Standby <0.5 W
<b>EDID version</b>	VGA – 1.3 HDMI – 1.3
<b>Preset Modes</b>	Primary 1920 (H) x 1080 (V) @ 60Hz.

## Optical Characteristics

### RAKEN Panel


Item			Specification
Supplier			RAKEN
Panel			LC370WUE_SBA1
Display Pixels (H x V)			1920 x 1080
Active Display Area (H x V, mm)			819.36 (H) x 460.89 (V)
Color Depth			8bit(D)
Pixel Pitch (H x V, mm)			0.42675mm x 0.42675mmxRGB
Luminance of white (cd/m <sup>2</sup> ) (Center of Screen, Typical)			500
Contrast Ratio			1400:1
Color coordinate (typical) ±0.030	White	x	0.279
		y	0.292
	Red	x	0.639
		y	0.334
	Green	x	0.289
		y	0.606
	Blue	x	0.145
		y	0.065

Remark: All characteristics are measured at least 30 minutes later after power-on in the normal ambient temperature

## 2. POWER SUPPLY

- a. Input voltage: 100~240Vac, 50/60Hz
- b. Input current: 3A (at AC 90V/60Hz)
- c. Inrush current: 100A at Vac=100V
- d. Power consumption: 178 W MAX/ 126 W AVG
- e. Standby / Power off: <0.5 Watts. (at 115 Vac)

Mechanical and Packaging Specifications

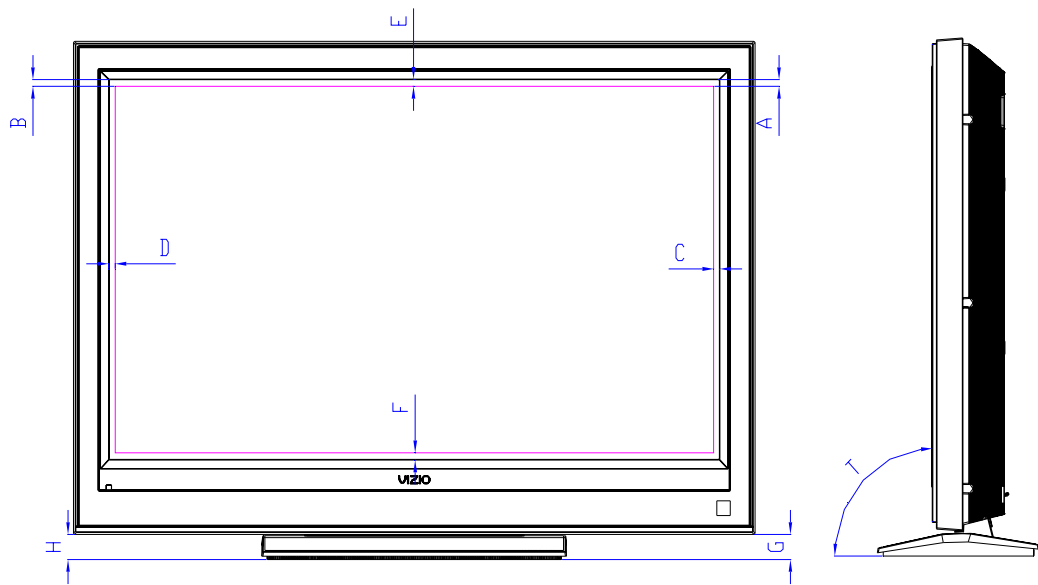

## MECHANICAL SPECIFICATION

(Unit: mm)

Gap allowance between bezel & panel surface	Gap $\leq 4.0$
Horizontal Tilt	$ A-B  \leq \text{NONE}$
Panel disposition tolerance	C,D,E,F > 0
Product balance	$ G-H  \leq 5 \text{ mm}$
Tilt angle	$89^\circ \leq T \leq 91^\circ$ up : $-2^\circ \sim -5^\circ$ Down : $13^\circ \sim 18^\circ$

## OUTLINE DIMENSION

Physical dimension

(Unit: mm)

	Display Module	Display Module + Base
Height	603.7	634.3
Width	919.9	919.9
Depth	98	218.2

---

## Weight

a. Net (W/O Base):	12.6 ±1.0kg
b. Net (W/ Base):	13.1 ±1.0kg
c. Gross:	17.0±1.0kg

## Material, color

Part name	Material	Color
Front bezel	ABS(94-HB)	Chocolate T52013
Rear cover	ABS(94-5V)	Black T52013
Base Ass'y	ABS(94-HB)	Chocolate T52012

## Wall-mounting

a. Screw size:	M6* PITCH 1.0 mm
b. Screw Q'ty:	4 pcs
c. Mounting hole pitch:	400 (H), 200 (V) (mm)

## PACKAGING SPECIFICATION

### Packaged dimensions

a. Height	745.0 ±10 mm
b. Width	1060.0 ±10 mm
c. Depth	225.0 ±10 mm

### Pallet Load

a. Sea	A)15 units / pallet
b. Air	A)NONE

### Container Load

a. 40' container	330 units (=15*22 Pallets)
b. 20' container	100 units (=10*10 Pallets)




---

## ACCESSORIES

- a. 1.8M HDMI Cable x 1
- b. 1.8M Power Cord 110V UL/CSA Black x 1
- c. VIZIO Universal Remote Control VUR8P x 1
- d. User's Manual x 1
- e. Quick Start Guide x 1\*
- f. Registration card x 1
- g. Service Brochure x 1\*
- h. AA batteries x 2
- i. D size Polishing Cloth x 1
- j. Safety Strap x 1
- k. Product Warranty & Repair sheet x 1

## External Control Panel & Indicators

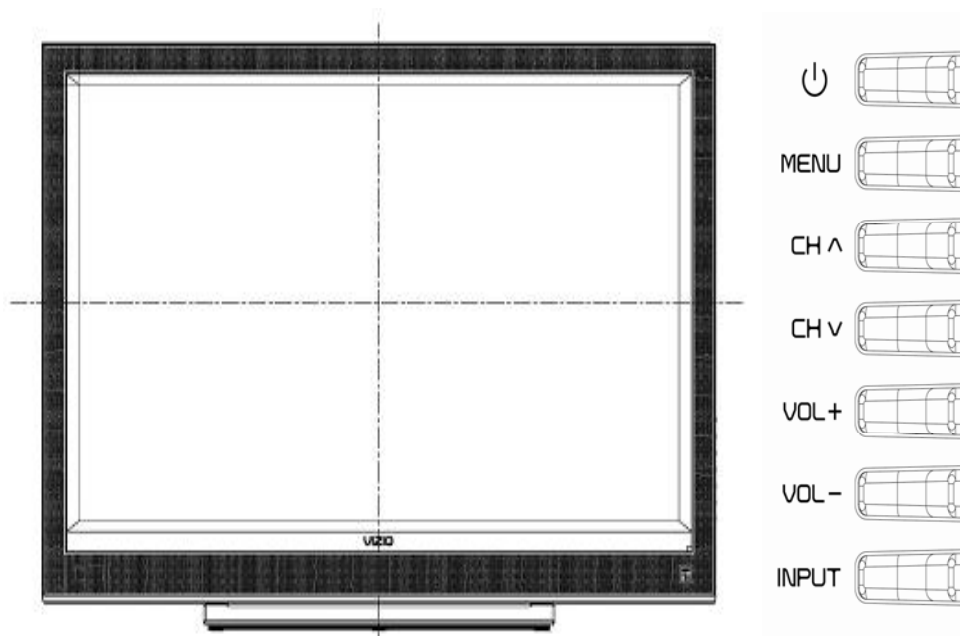

---

### 3. LED INDICATOR DISPLAY ON THE FRONT

LED indicator	Status	Remark
Off	AC power off	By disconnecting the power cord
White	Power on	Becoming dimmer after lighting up a few seconds
Orange	Standby	Becoming dimmer after lighting up a few seconds

### 4. SPECIFICATION AND EXPLANATION OF USER CONTROL PANEL ON THE SIDE

Buttons	1	2	3	4	5	6	7
Name	(Power symbol))	MENU	CH+	CH-	VOL+	VOL-	INPUT

Standby/Power on

After AC on, by pressing Power button, LED indicator turns to white to indicate power on. To turn off this device, press this button again.

Menu Operation

Press MENU button to activate the OSD. Press this button again to exit.

Channel Selection

By operating the CH+ and CH- buttons, channel should be selected. At the time, channel should increase with CH+ button and decrease with CH- button.

When the "MENU" is activated, it can be navigated up by CH+ button and down by CH- button.

---

## Volume Adjustment

By operating the VOL+ and VOL-/ buttons, volume should be available to change from minimum to maximum. At the time, volume should increase with VOL+ button and decrease with VOL- button, and volume shift should be smooth.

When the "MENU" is activated, it can be navigated left by VOL+ button and right by VOL-button.

## Input Change

This button allows the user to cycle through the input sources in the following sequence: TV, AV1(S-Video), AV2 (Video\*), Component 1, Component 2, RGB, HDMI 1, HDMI 2 and HDMI 3.

## 5. Speaker

Output 6Ω/10W (max) X2

## 6. ENVIRONMENT

Operating Temperature: 5°C~35°C (Ambient)

Operating Humidity: Ta= 35 °C, 90%RH (Non-condensing)

Operating Altitude: 0~14,000 feet (Non-Operating)

## 7. WEIGHT (Physical weight)

Net (Without Base): 12.6 ±1.0kg

Net (With Base): 13.1 ±1.0kg

Gross: 17.0±1.0kg

# Chapter 3      On Screen Display

Main unit button

Power    

MENU

CH ▲

CH ▼

VOL ▲

VOL ▼



Input (TV Source on Screen Display)

AV, Component	
	<p>A. PICTURE ADJUST :</p> <ul style="list-style-type: none"><li>a. Picture Mode (<b>Custom</b>/Standard/Movie/Game/Vivid/Football/Golf/Basketball/Baseball)</li><li>b. Backlight (0~100)</li><li>c. Brightness (0~100)</li><li>d. Contrast (0~100)</li><li>e. Color (0~100)</li><li>f. Tint (-32~+32)</li><li>g. Sharpness (0~7)</li><li>h. Advance Video<ul style="list-style-type: none"><li>Noise Reduction/Color Enhancement/Advanced Adaptive Luma/Backlight Control/Color Temperature/Film Mode</li></ul></li><li>i. Rest Picture Mode</li></ul>

	<p>B. AUDIO ADJUST :</p> <ul style="list-style-type: none"> <li>a. Audio Mode (<b>Flat</b>/Rock/Pop/Classic/Jazz)</li> <li>b.Equalizer (120Hz0/500Hz/1.5KHz/5KHz/10KHz)</li> <li>c.Balance(-50~0~50)</li> <li>d.SRS TSHD(<b>On</b>/OFF)</li> <li>e.Digital Audio Out (<b>PCM</b>/Off/Dolby Digital)</li> <li>f.Speakers(<b>On</b>/Off)</li> <li>g.Analog Audio Out (<b>Fixed</b>/Variable)</li> <li>h.Lip Sync(0~5)</li> <li>i.Reset Audio Mode</li> </ul>
	<p>C. SETUP :</p> <ul style="list-style-type: none"> <li>a. Language(<b>English</b>/Espanol /Francais)</li> <li>b. Sleep Timer (<b>OFF</b>/30MIN/60MIN/90MIN/120MIN)</li> <li>c. Wide(Zoom1)</li> <li>d. Input Naming(AV1/AV2/Component1/Component2/RGB/HDMI1/HDMI2/HDMI3)</li> <li>e. CC (<b>Off</b>/CC1/CC2/CC3/CC4)</li> <li>f. Parental(Password)</li> <li>g. System Info</li> <li>h. System Reset (Setup Wizard/Reset All Setting)</li> </ul>

	<p>D. PARENTAL CONTROL :</p> <ul style="list-style-type: none"> <li>a. Channel Block</li> <li>b. US TV Rating</li> <li>c. US Movie Rating</li> <li>d. Canadian English Rating</li> <li>e. Canadian French Rating</li> <li>f. DTV Rating</li> <li>g. Block Unrated TV (<b>No/Yes</b>)</li> <li>h. Access Code Edit</li> </ul>
<p>HDMI</p>	
	<p>A. PICTURE ADJUST :</p> <ul style="list-style-type: none"> <li>a. Picture Mode (<b>Custom</b>/Standard/Movie/Game/Vivid/Football/Golf/Basketball/ all Baseball)</li> <li>b. Backlight (0~100)</li> <li>c. Brightness (0~100)</li> <li>d. Contrast (0~100)</li> <li>e. Color (0~100)</li> <li>f. Tint (-32~+32)</li> <li>g. Sharpness (0~7)</li> <li>h. Advance Video <ul style="list-style-type: none"> <li>Noise Reduction/Color Enhancement/Advanced Adaptive Luma/Backlight Control/Color Temperature/Film Mode</li> </ul> </li> <li>i. Rest Picture Mode</li> </ul>



	<p>B. AUDIO ADJUST :</p> <ul style="list-style-type: none"> <li>a. Audio Mode <b>Flat</b>/Rock/Pop/Classic/Jazz)</li> <li>b.Equalizer(120Hz0/500Hz/ 1.5KHz/5KHz/10KHz)</li> <li>c.Balance(-50~0~50)</li> <li>d.SRS TSHD(<b>On</b>/OFF)</li> <li>e. Digital Audio Out (<b>PCM</b>/Off/Dolby Digital)</li> <li>f.Speakers(<b>On</b>/Off)</li> <li>g.Analog Audio Out (<b>Fixed</b>/Variable)</li> <li>h.Lip Sync(0~5)</li> <li>i.Reset Audio Mode</li> </ul>
	<p>C. SETUP :</p> <ul style="list-style-type: none"> <li>a. Language(<b>English</b>/Espanol /Francais/)</li> <li>b. Sleep Timer (<b>OFF</b>/30MIN/60MIN/90MIN/ 120MIN)</li> <li>c. Wide(Zoom1)</li> <li>d. Input Naming(AV1/AV2/Component1/Compone nt2/RGB/HDMI1/HDMI2/HDMI3)</li> <li>e. System Info</li> <li>f. System Reset (Setup Wizard/Reset All Setting)</li> </ul>



	<p>D. ADVANCED VIDEO :</p> <ul style="list-style-type: none"> <li>a. Noise Reduction (OFF/Low/Medium/Strong)</li> <li>b. Color Enhancement(OFF/Normal/Rich Color/(Green/Flesh)/(Green/Blue))</li> <li>c. Advance Adaptive LUMA(OFF/Low/Medium/Strong/Extended)</li> <li>d. Backlight Control(OFF/DCR/OPC)</li> <li>e. Color Temperature  (Color Temperature  (Color temputer/Normal//Custom)  /Red(0~255)/Green(0~255)/Blue(0~255)</li> <li>f. Film Mode(Auto/OFF)</li> </ul>
<p><b>RGB MODE</b></p>	
	<p>A. PICTURE ADJUST :</p> <ul style="list-style-type: none"> <li>a. Auto Adjust</li> <li>b. Backlight (0~100)</li> <li>c. Brightness (0~100)</li> <li>d. Contrast (0~100)</li> <li>e. Color Temperature( Color Temperature(<b>9300</b>/6500/CUSTOM)/Red( 0~255)/Green(0~255)/Blue(0~255))</li> <li>f. H-Size (0~255)</li> <li>g. H. Position (0~100)</li> <li>h. V. Position (0~100)</li> <li>i. Fine Tune (0~31)</li> </ul>





	<p>B. AUDIO ADJUST :</p> <ul style="list-style-type: none"> <li>a. Audio Mode (<b>Flat</b>/Rock/Pop/Classic/Jazz)</li> <li>b. Equalizer(120Hz0/500Hz/1.5KHz/5KHz/10KHz)</li> <li>c. Balance(-50~0~50)</li> <li>d. SRS TSHD(<b>On</b>/Off)</li> <li>e. Digital Audio Out (<b>PCM</b>/Off/Dolby Digital)</li> <li>f. Speakers(<b>On</b>/Off)</li> <li>g. Analog Audio Out(<b>Fixed</b>/Variable)</li> <li>h. Lip Sync(0~5)</li> <li>i. Reset Audio Mode</li> </ul>
	<p>C. SETUP:</p> <ul style="list-style-type: none"> <li>a. Language(English/Espanol /Francais/)</li> <li>b. Sleep Timer (<b>OFF</b>/30MIN/60MIN/90MIN/120MIN)</li> <li>c. Wide(Full/Stretch)</li> <li>d.Input Naming (AV1/AV2/Component1/Component2/ RGB/HDMI1/HDMI2/HDMI3)</li> <li>e.System Info</li> <li>f.System Reset  (Setup Wizard/Reset All Setting)</li> </ul>

(1) <b>TV&amp;DTV MODE</b>	
	<p>A. PICTURE ADJUST : (ATV &amp; DTV)</p> <ul style="list-style-type: none"> <li>a. Picture Mode (<b>Custom</b>/Standard/Movie/Game/Vivid/Football/Golf/Basketball/Baseball)</li> <li>b. Backlight (0~100)</li> <li>c. Brightness (0~100)</li> <li>d. Contrast (0~100)</li> <li>e. Color (0~100)</li> <li>f. Tint (-32~+32)</li> <li>g. Sharpness (0~7)</li> <li>h. Advance Video <ul style="list-style-type: none"> <li>Noise Reduction/Color Enhancement/Advanced Adaptive Luma/Backlight Control/Color Temperature/Film Mode</li> </ul> </li> <li>i. Reset Picture Mode</li> </ul>
	<p>B. AUDIO ADJUST : (ATV &amp; DTV)</p> <ul style="list-style-type: none"> <li>a. Audio Mode (<b>Flat</b>/Rock/Pop/Classic/Jazz)</li> <li>b. Equalizer(120Hz/500Hz/1.5KHz/5KHz/10KHz)</li> <li>c. Balance(-50~0~50)</li> <li>d. SRS TSHD(Off/<b>On</b>)</li> <li>e. Digital Audio Out (<b>PCM</b>/Off/Dolby Digital)</li> <li>f. Speakers(<b>On</b>/Off)</li> <li>g. Analog Audio Out(<b>Fixed</b>/Variable)</li> <li>h. Lip Sync(0~5)</li> <li>i. Reset Audio Mode</li> </ul>


	<p>C. TV: (ATV &amp; DTV)</p> <ul style="list-style-type: none"> <li>a. Tuner Mode (Cable/Antenna)</li> <li>b. Auto Search</li> <li>c. Partial Channel Search</li> <li>d. Skip Channel</li> <li>e. MTS(Stereo/SAP/Mono) (<b>ATV</b>) MTS ((1/2 English 5.)/ (2/2 Spanish st))(<b>DTV</b>)</li> <li>f. Time Zone (<b>Eastern</b>/Indiana/Central/ Mountain/Arizona/Newfoundland/Pacific/ Alaska/Hawaii/Atlantic)</li> <li>g. Daylight Saving (<b>On</b>/Off)</li> <li>h. Channel info</li> </ul>
	<p>D. SETUP: (ATV only)</p> <ul style="list-style-type: none"> <li>a. Language(<b>English</b>/Espanol /Francais)</li> <li>b. Sleep Timer (<b>OFF</b>/30MIN/60MIN/90MIN/ 120MIN)</li> <li>c. Wide(Normal/Panoramic/Zoom1/Zoom2)</li> <li>d. Input Naming (AV1/AV2/Component1/Component2/ RGB/HDMI1/HDMI2/HDMI3)</li> <li>e. CC (CC/Digital CC Style)</li> <li>f. H/V Position(H. Position/V. Position/ H-Size/ V-Size)</li> <li>g. Parental</li> <li>h. System Info</li> <li>i. System Reset  (Setup Wizard/Reset All Setting)</li> </ul>

 <p>The image shows the VIZIO TV Setup menu. At the top is the VIZIO logo in orange. Below it are the options 'Picture' and 'Audio Mode'. The 'Setup' option is highlighted with an orange border and a small orange arrow pointing to it. Below the menu is a note: 'Use this Menu to adjust built-in features of the TV'. At the bottom are three buttons: 'OK' (labeled 'Enter'), 'Left/Right' (labeled 'Select'), and 'MENU' (labeled 'Exit').</p>	<p>E. SETUP: (DTV only)</p> <ul style="list-style-type: none"> <li>a. Language(<b>English</b>/Espanol /Francais/)</li> <li>b. Sleep Timer (<b>OFF</b>/30MIN/60MIN/90MIN/120MIN)</li> <li>c. Wide(Zoom1/Stretch)</li> <li>d. Input Naming(AV1/AV2/COMPONENT1/COMPONENT2/RGB/HDMI1/HDMI2)</li> <li>e. CC (CC/Digital CC Style)</li> <li>f. Parental</li> <li>g. System Info</li> <li>h. System Setup (Setup Wizard/Reset All Setting)</li> </ul>
 <p>The image shows the VIZIO TV Parental Control menu. At the top is the option 'Rating Enable'. Below it, 'Channel Block' is highlighted with an orange border and a small orange arrow pointing to it. Below that are the options 'US TV Rating', 'US Movie Rating', and 'Canadian English Rating'. At the bottom is a note: 'Select channels to block'. Below the menu are three buttons: 'OK' (labeled 'Enter'), 'Left/Right' (labeled 'Select'), and 'MENU' (labeled 'Back').</p>	<p>F. PARENTAL : (ATV &amp; DTV)</p> <ul style="list-style-type: none"> <li>a. Channel Block</li> <li>b. US TV Rating</li> <li>c. US Movie Rating</li> <li>d. Canadian English Rating</li> <li>e. Canadian French Rating</li> <li>f. DTV Rating</li> <li>g. Block Unrated TV</li> <li>h. Access Code Edit</li> </ul>


	<p>G. ADVANCED VIDEO : (ATV &amp; DTV)</p> <ul style="list-style-type: none"> <li>a. Noise Reduction (Off/<b>Low</b>/Medium/Strong)</li> <li>b. Color Enhancement (Off/<b>Normal</b>/Rich Color/(Green/Flesh)/(Green/Blue))</li> <li>c. Advance Adaptive LUMA (Off/Low/<b>Medium</b>/Strong/Extend)</li> <li>d. Backlight Control(<b>DCR</b>/OPC/Off)</li> <li>e. Color Temperature(Color Temperature/Red /Green/Blue)</li> <li>f. Film Mode(Auto/Off)</li> </ul>
	<p>H. CC</p> <ul style="list-style-type: none"> <li>a. CC (Off/CC1/2/3/4/Service1/2/3/4/5/6)</li> <li>b. Digital CC Style (Caption Style/Font Size/Font Color/Font Opacity/Background Color/Background Opacity/Window Color/Window Opacity)</li> </ul>

# Chapter 9    Trouble shooting


## MONITOR DISPLAY NOTHING (PC MODE)

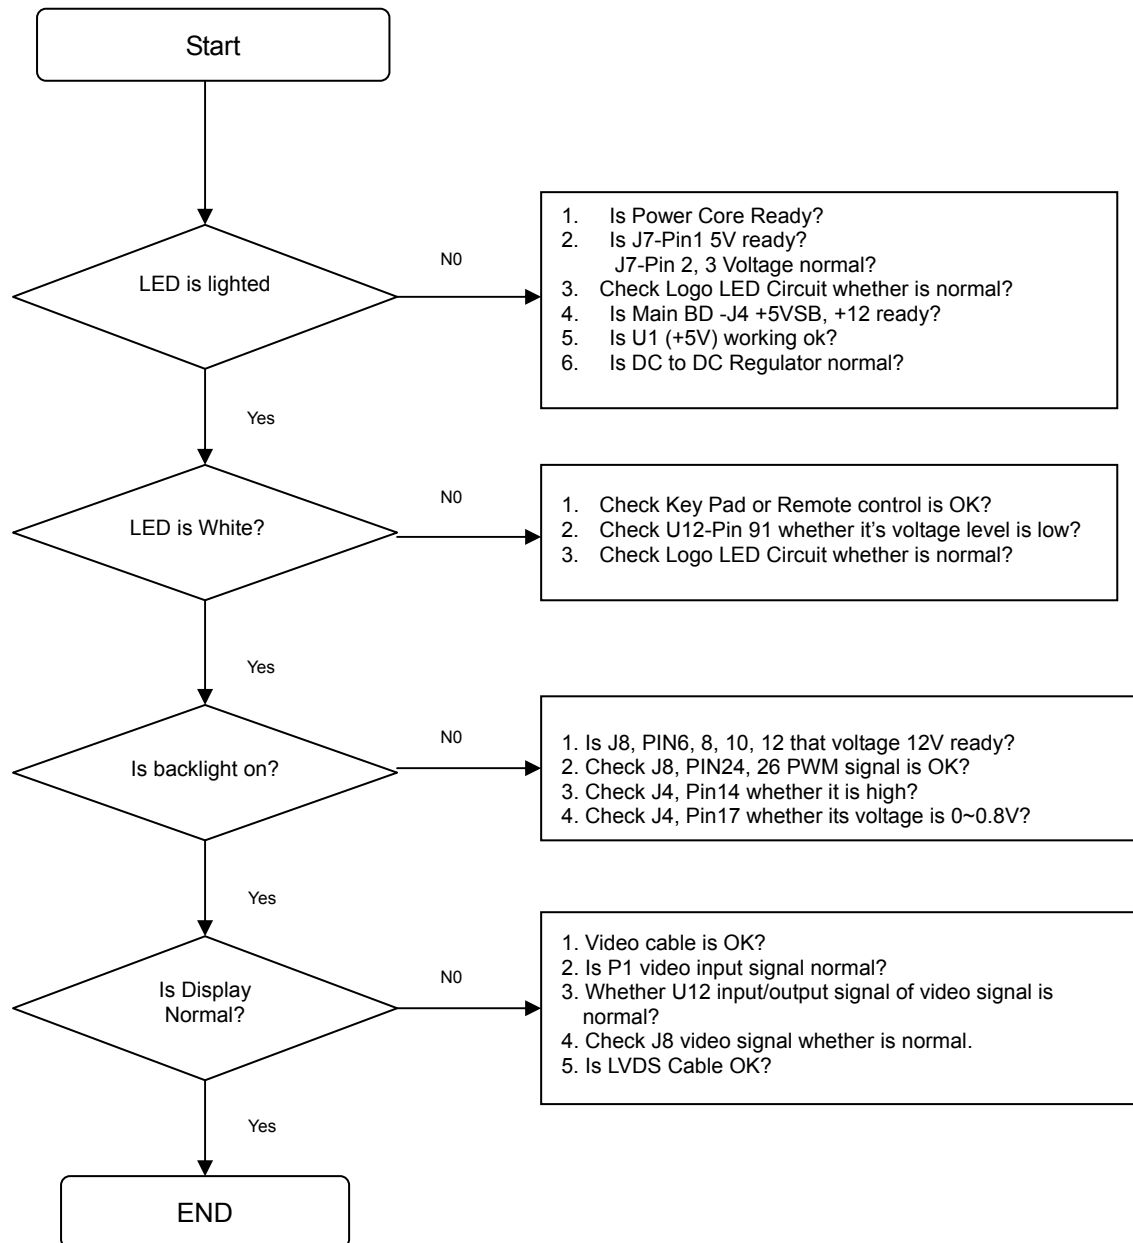

## (TV, COMPOSITE, VIDEO) IS NOT DISPLAY CORRECTLY

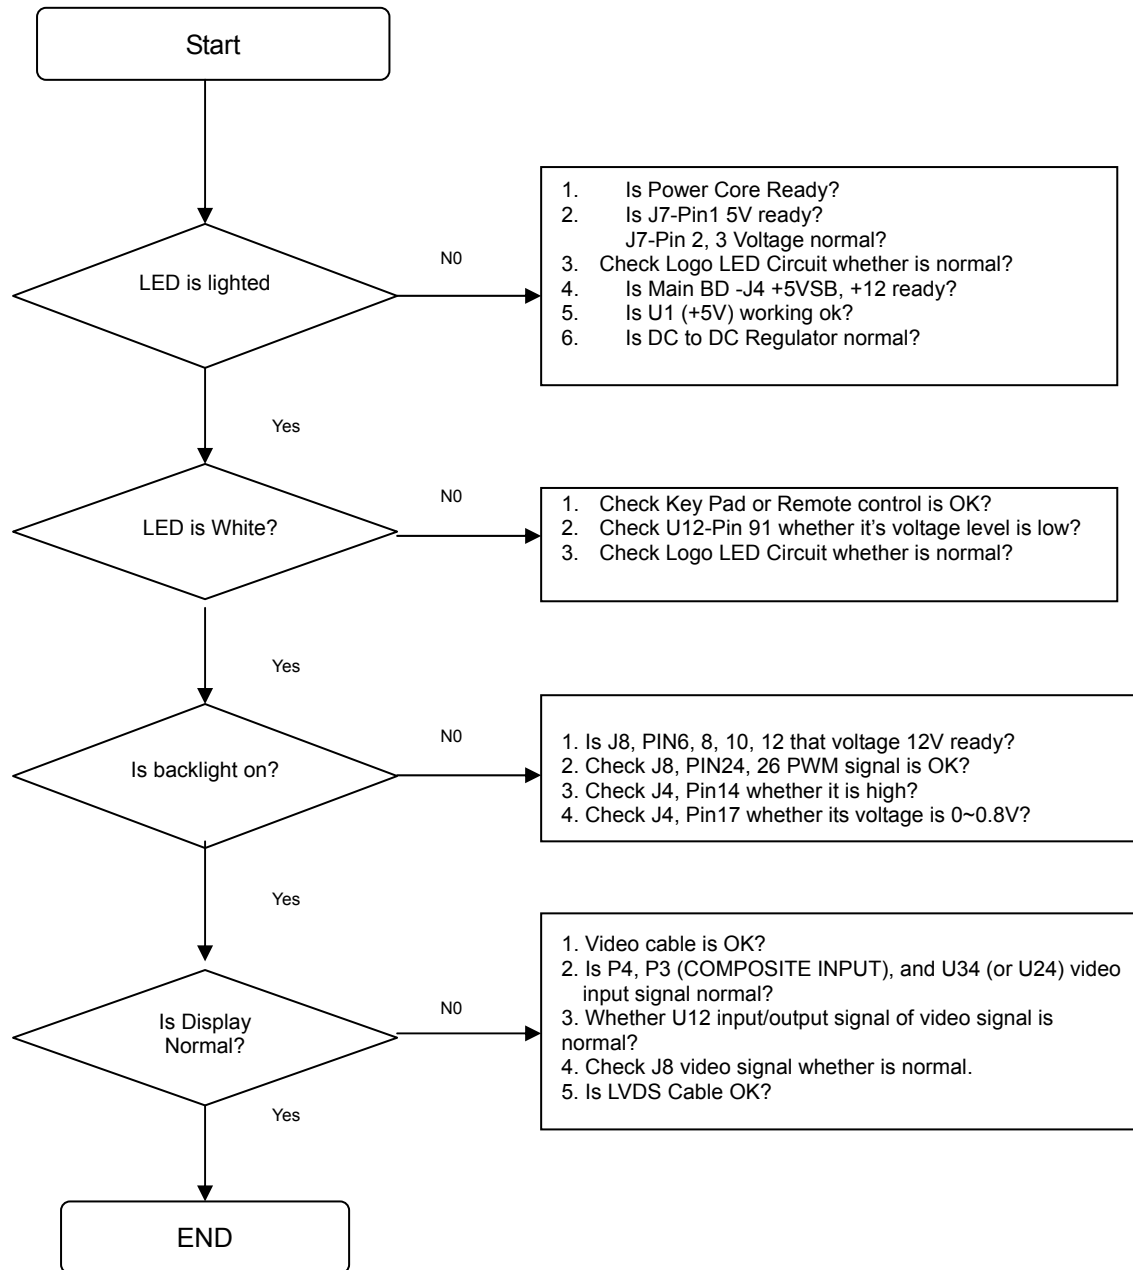


## (COMPONENT) IS NOT DISPLAY CORRECTLY

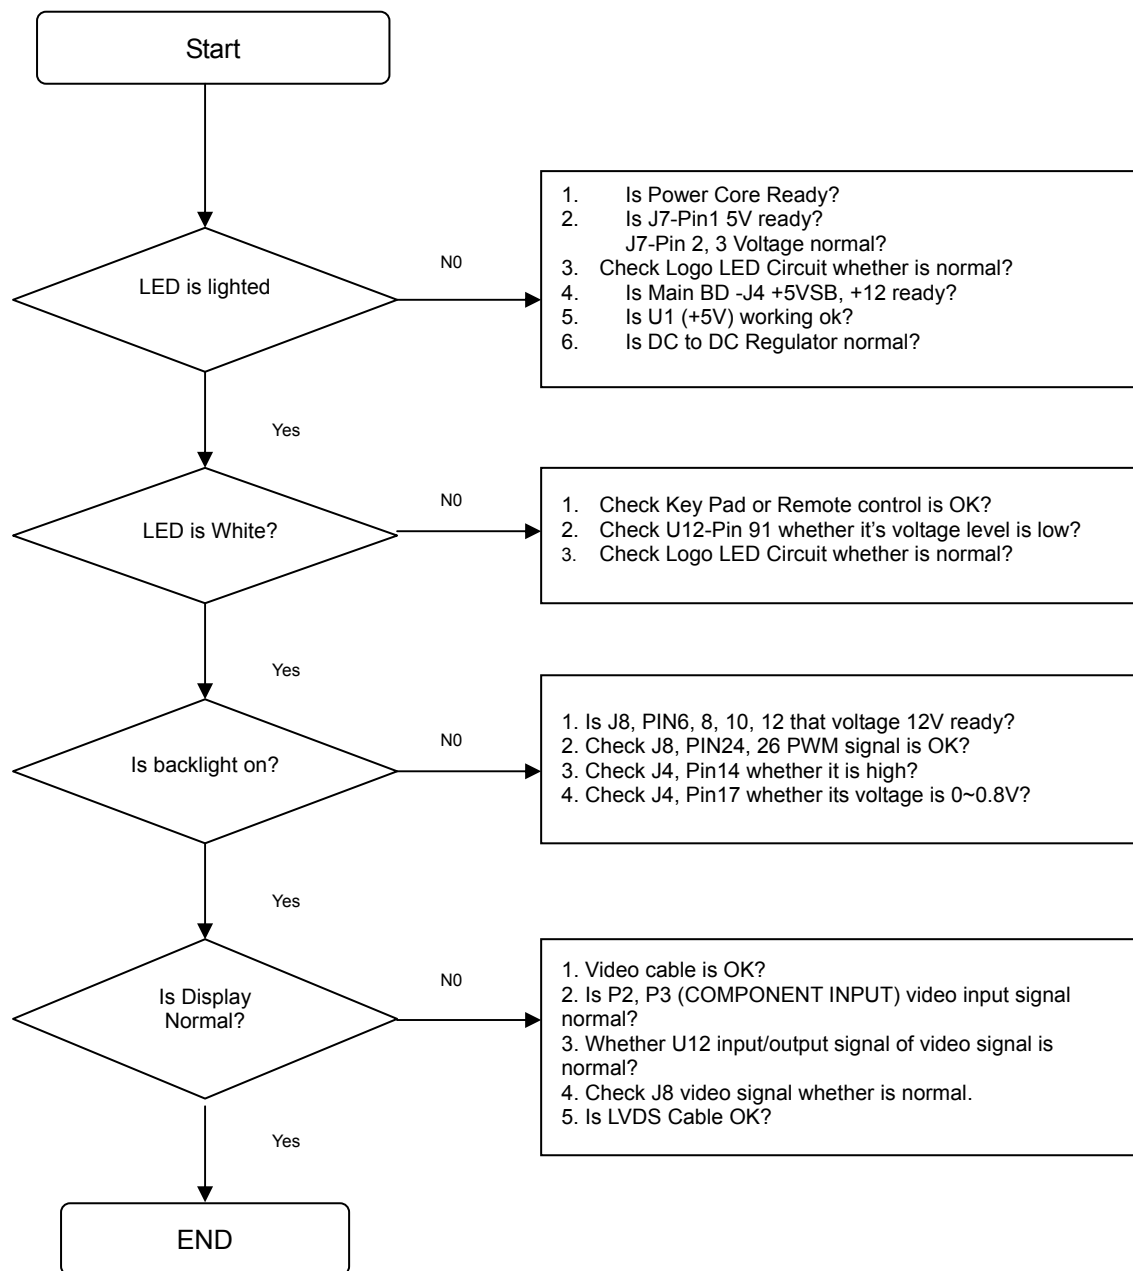





## HDMI IS NOT DISPLAY CORRECTLY

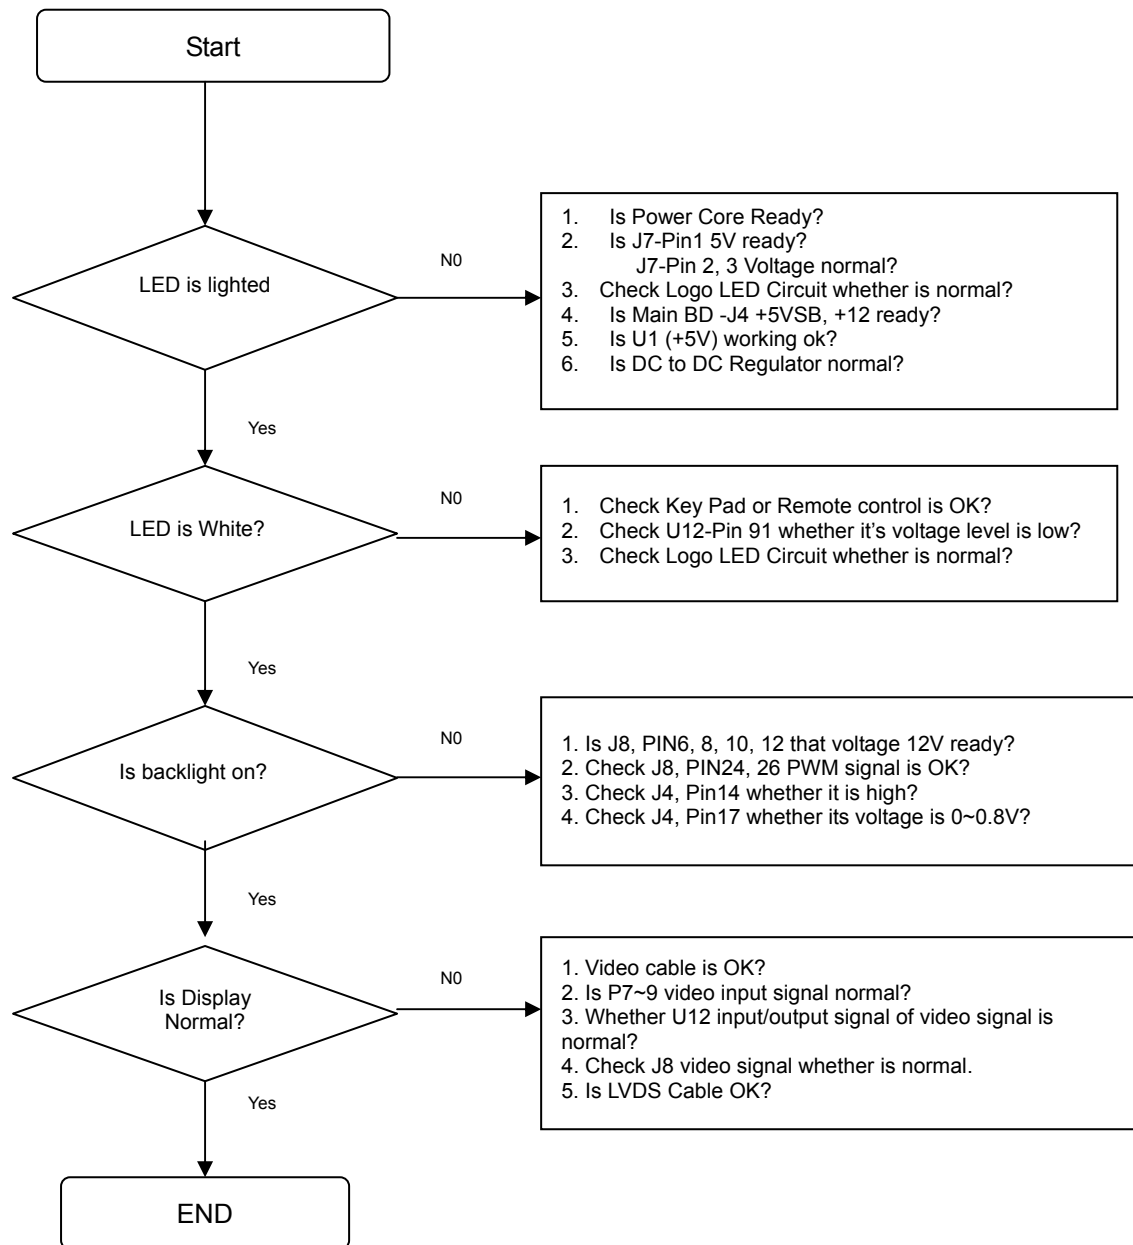


## TROUBLE OF DC-DC CONVERTER

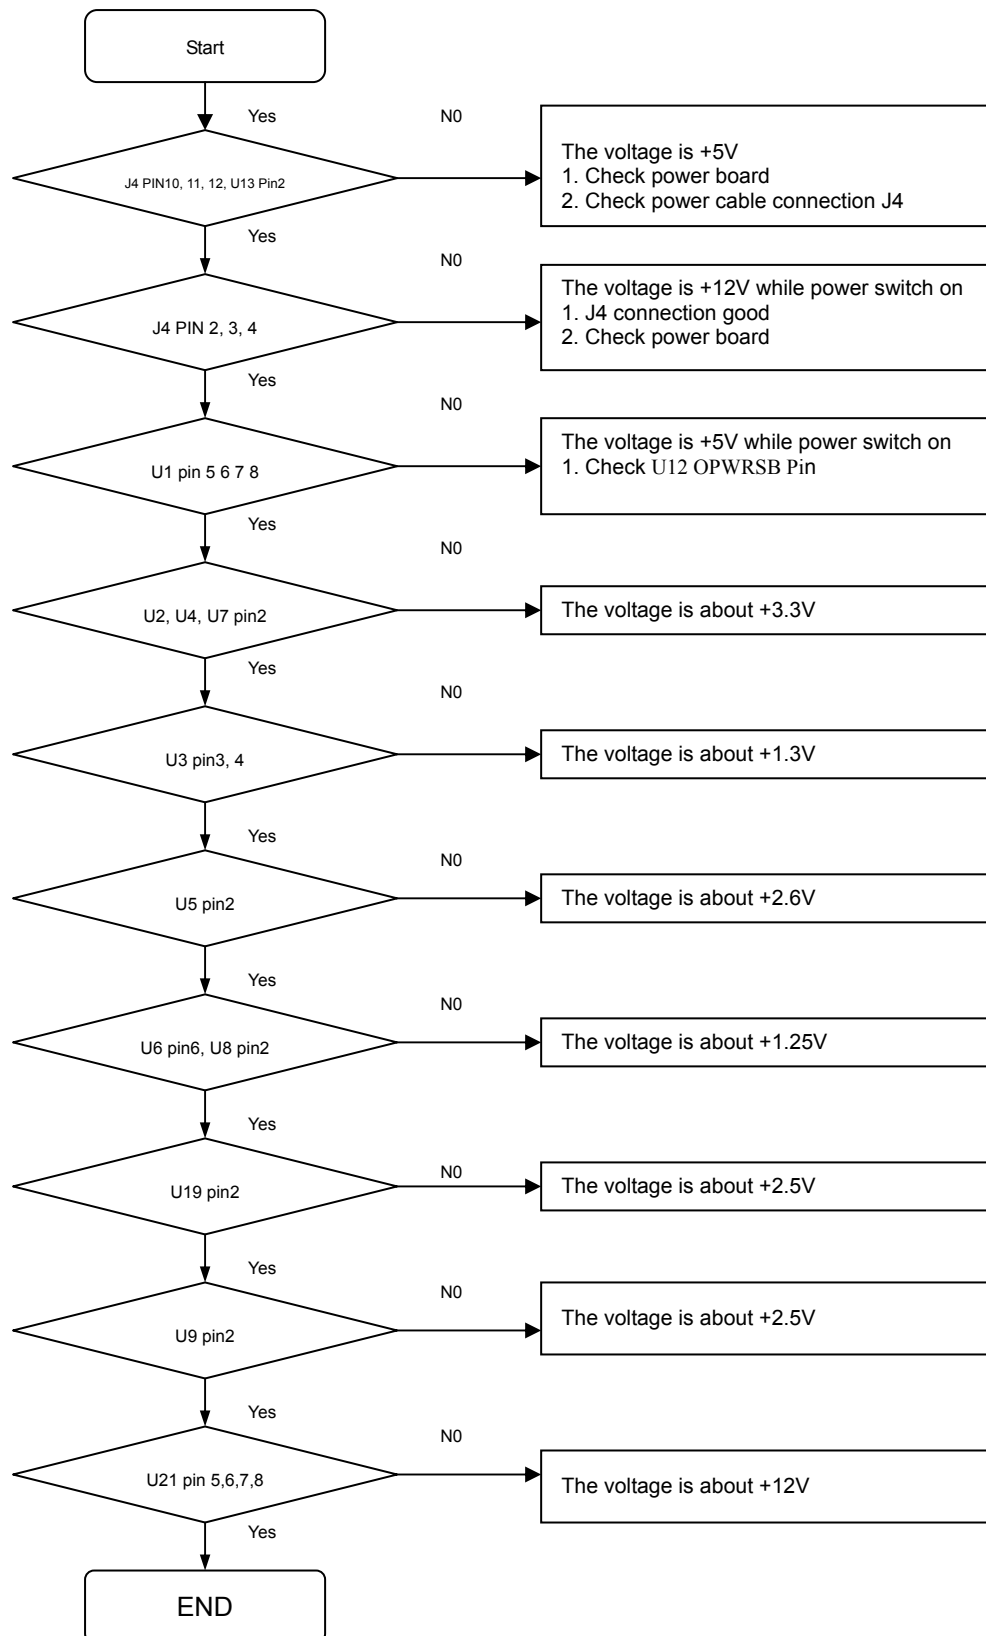

## TROUBLE OF DDC READING

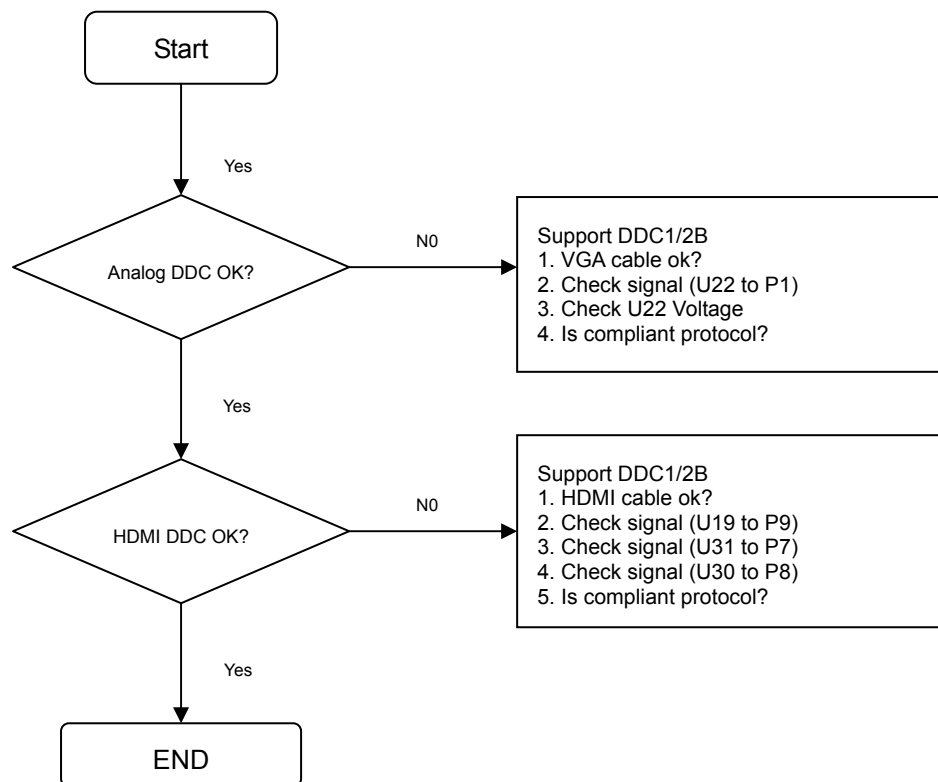



## AUDIO FUNCTION IS NOT WORKING CORRECTLY

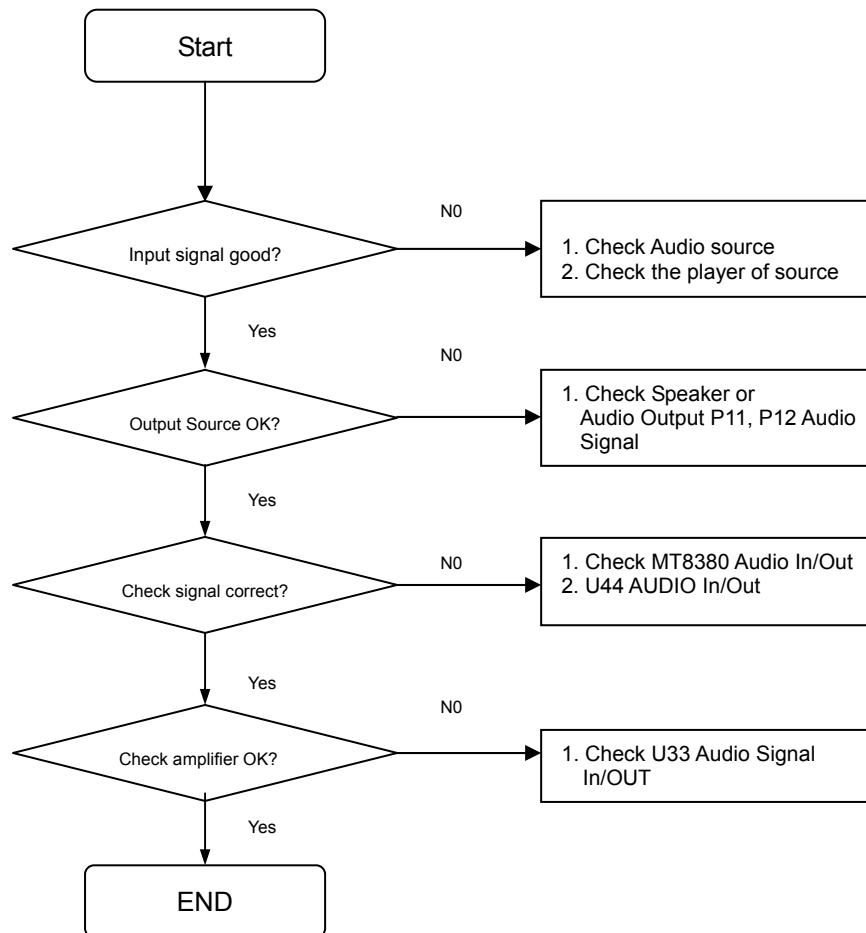

## 1. REAR COVER ASS'Y / CONNECTOR BD ASS'Y REMOVAL

*Note: Spread a mat underneath to avoid damaging the TV surface.*

- 1) Remove eight screws ① from Base Ass'y ②.
- 2) Separate the Base Ass'y ②.
- 3) Remove twenty-three ③ and two hexagon screws ④ from rear cover.
- 4) Separate the rear cover.
- 5) Remove ten screws ⑤ from main shielding.
- 6) Separate the Main shielding.

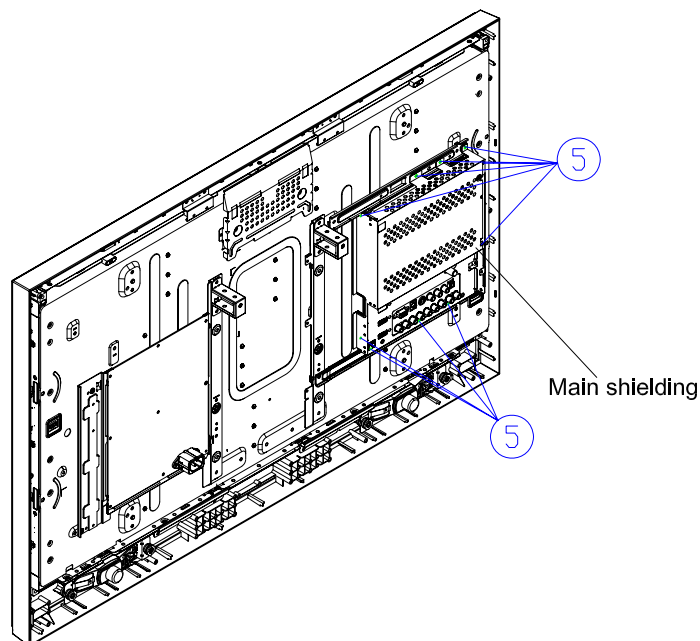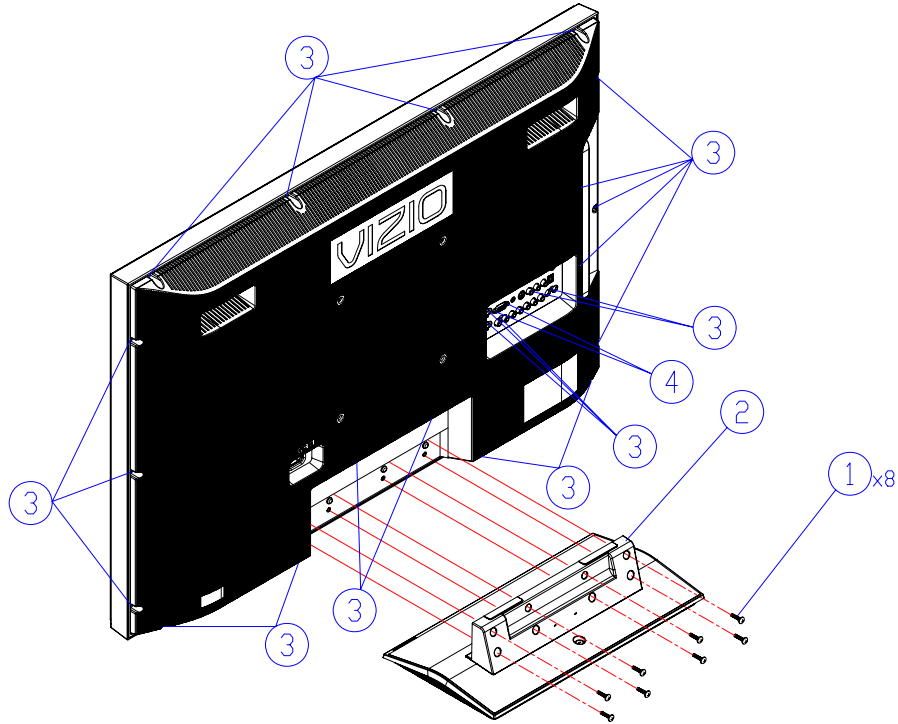



## 2. POWER BD ASS'Y REMOVAL

- 1) Remove the connector ⑥ (CN1) ⑦ (CN2) of the inverter cable.
- 2) Remove the connector ⑧ (CN3) ⑨ (CN4) of the Main cable.
- 3) Remove seven screws ⑩ from Power BD ASS'Y .
- 4) Separate the Power BD ASS'Y .

## 3. MAIN BD ASS'Y REMOVAL

- 1) Remove the connector ⑪ (J6) of the speaker cable.
- 2) Remove the connector ⑫ (J1) of the Main cable.
- 3) Remove the connector ⑬ (J7) of the LVDS cable.
- 4) Remove the connector ⑮ (J3) of the IR cable.
- 5) Remove the connector ⑭ (J2) of the LED Backlight cable.
- 5) Remove five screws ⑯ .
- 6) Separate the MAIN BD and side shielding.

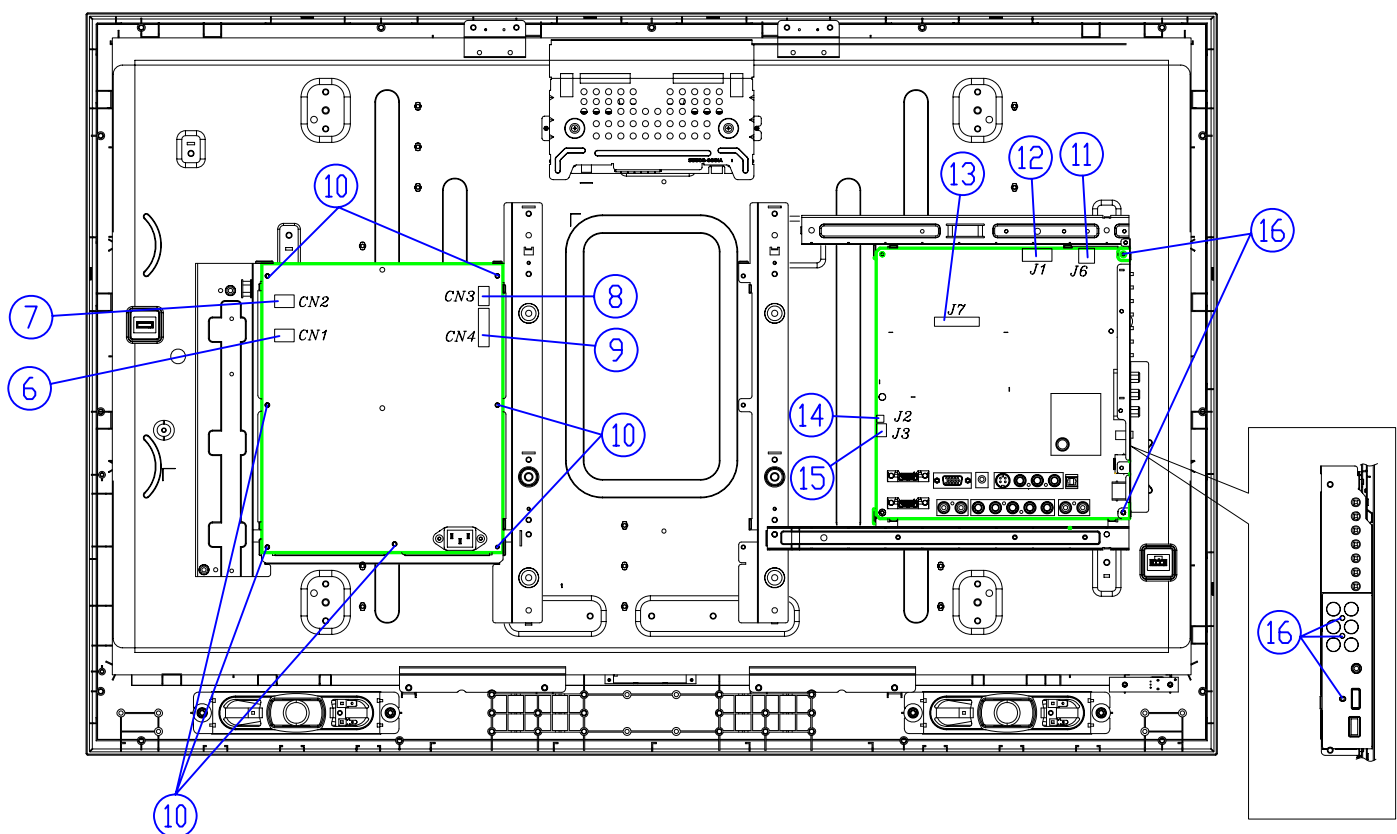

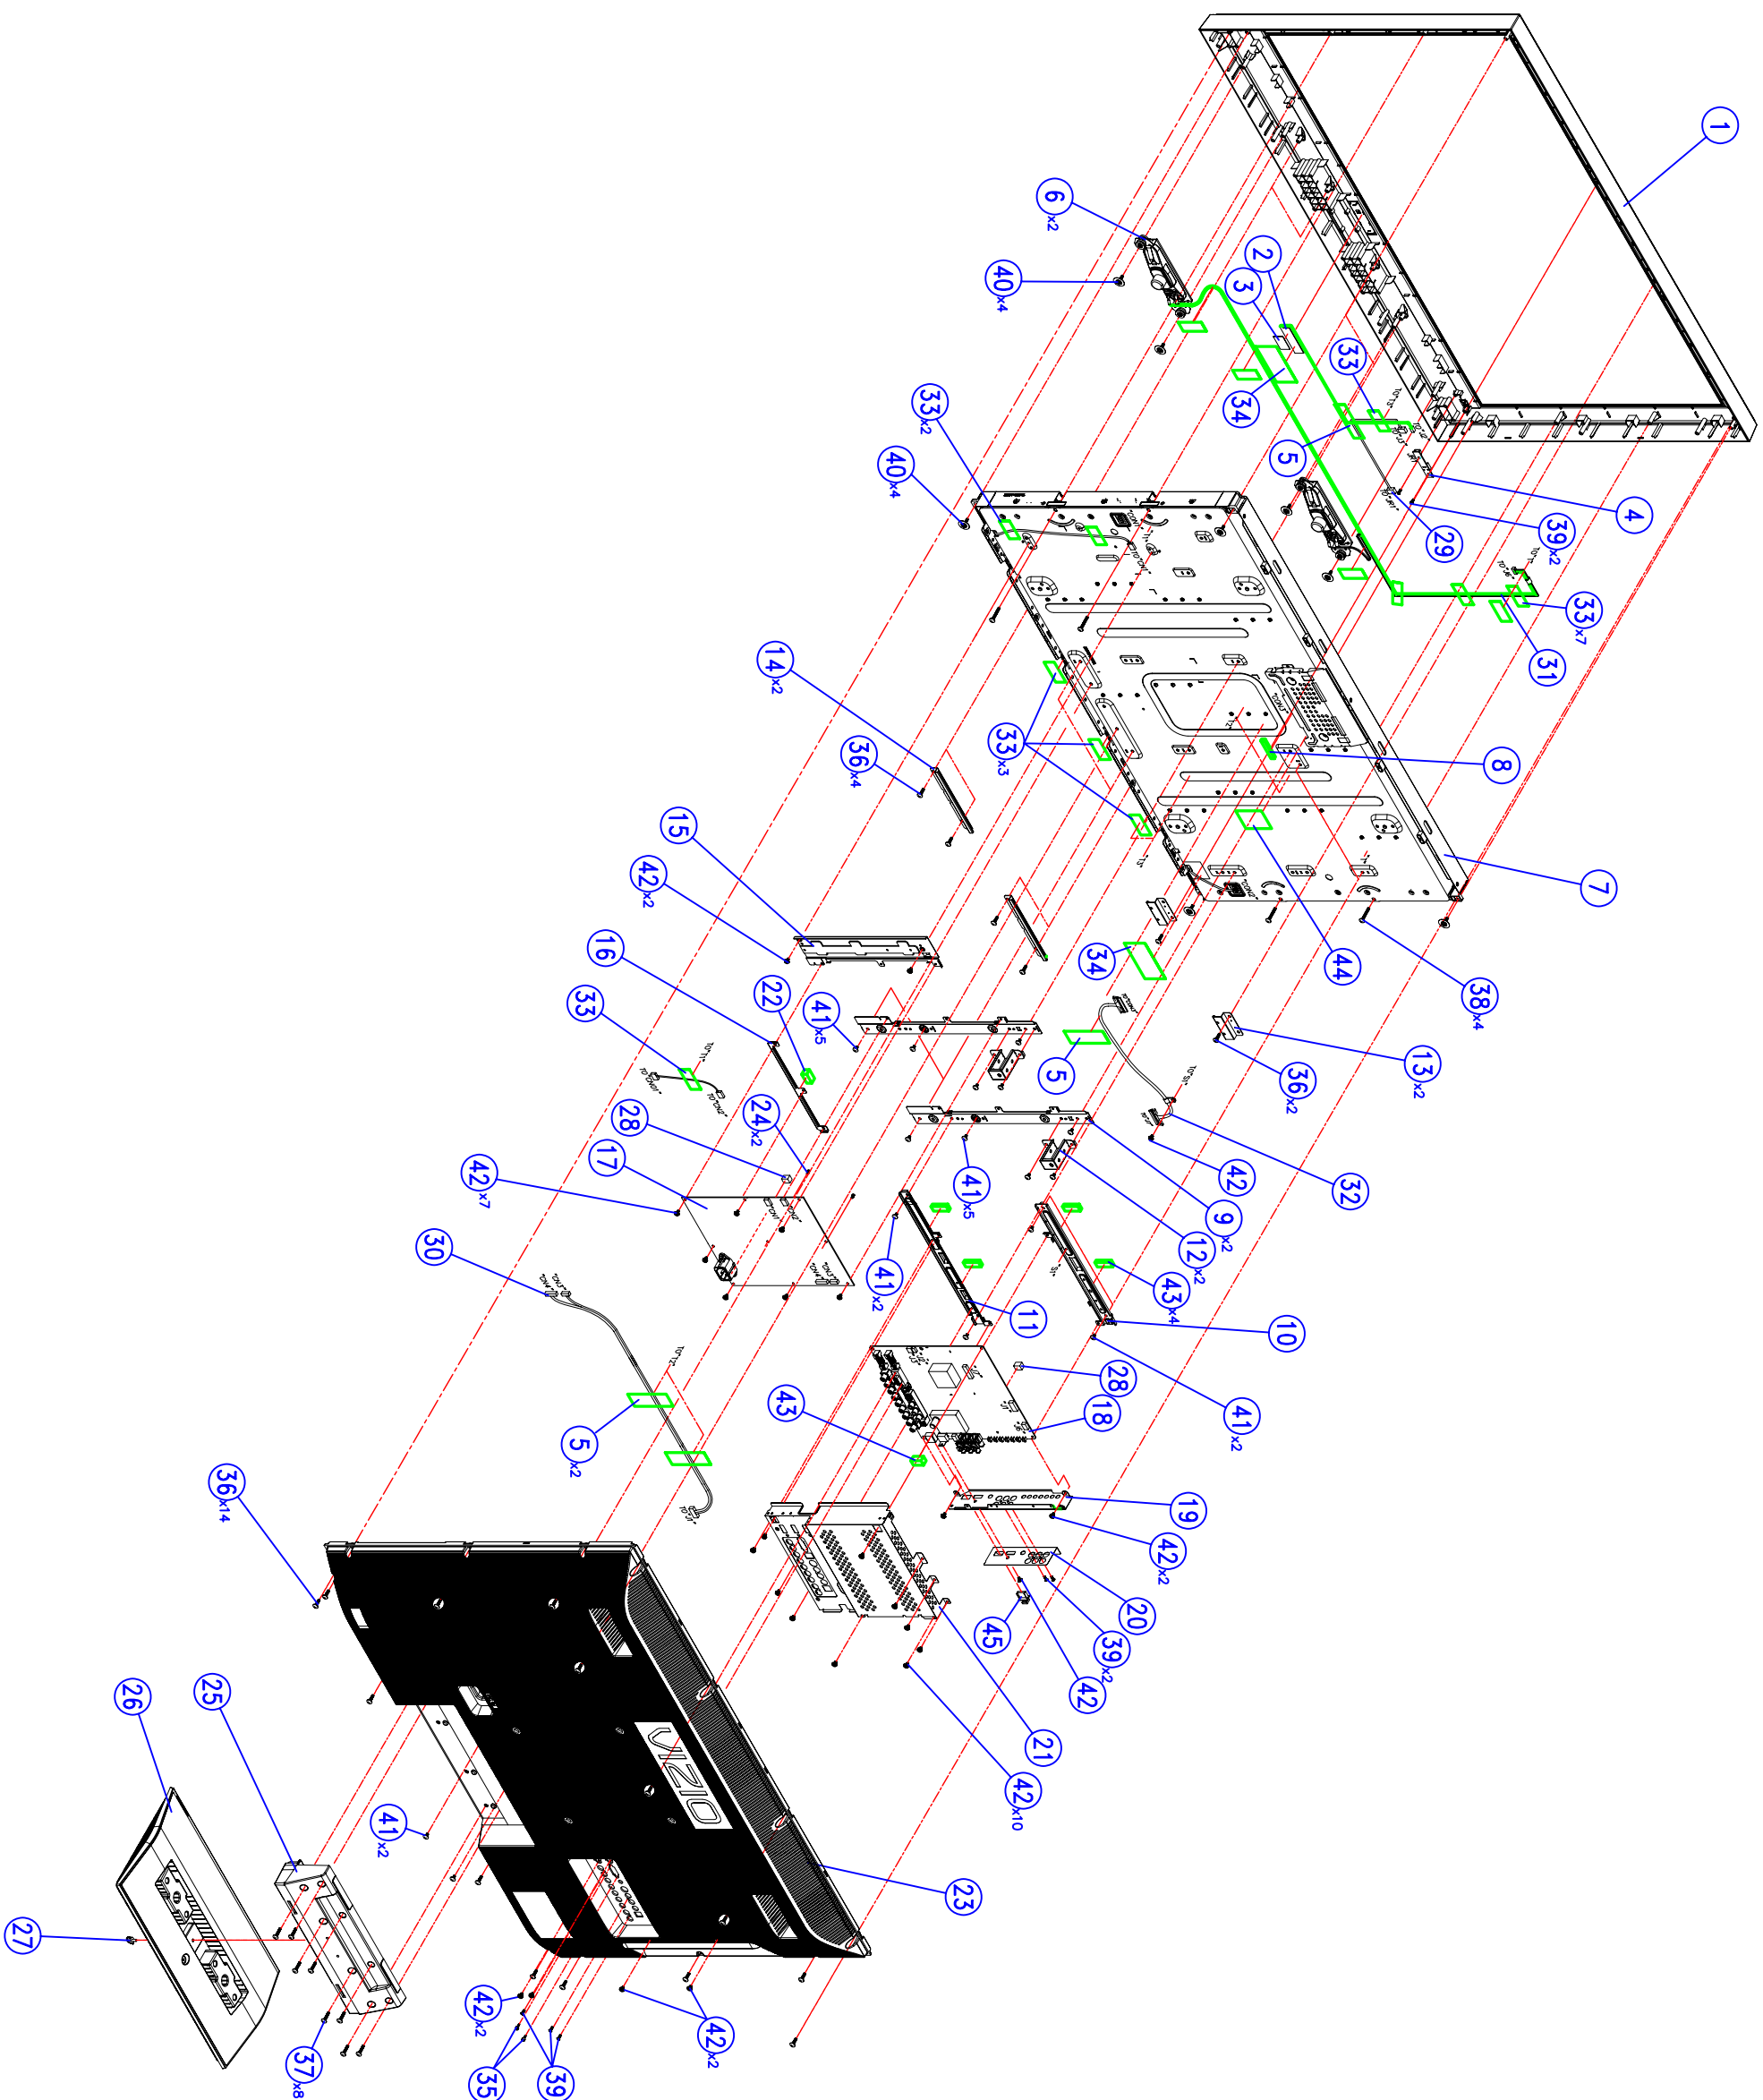

ITEM	DESCRIPTION	QTY
1	FRONT BELT(C/LINE)X(85 94-118/1520.3)(V0370M)ASS'Y	1
2	LEAD BACKRIGT 1.67256*1.5(1/32)-49(AMS)-1)560mm LF	1
3	M/LAR (1.0*28.0*0.6)(VX32L)	1
4	RR BD ASS'Y V0320E	1
5	ACETATE CLOTH TAPE ( 纖維粘着帶 ) 27*75mm	4
6	SPK 10W 64mm (1.67X3.1X3.4) SP-35167-06--08121BLF	2
7	LOM ASS'Y (1.320WUCL-SBA-1.6R)(REKEN)	1
8	LYOS RUBBER (40*7*4.0)(W57L30A)	1
9	MAIN FRAME BRACKET(SSCC 0.8)(V0370M)	2
10	MAIN BD BKT T (SECC 0.8)(V0370M)	1
11	MAIN BD BKT L (SECC 0.8)(V0370M)	1
12	WALL MOUNT BKT (SECC 1.0)(V0370M)	2
13	PANEL BKT T (SECC 0.8) (V0370M)	2
14	PANEL BKT B (SECC 1.0) (V0370M)	2
15	POWER BD BKT L (SECC 0.8) (V0370M)	1
16	POWER BD BKT B (SECC 0.8) (V0370M)	1
17	POWER/INVERTER ASS'Y BD PHL-1B31A LF	1
18	MAIN BD ASS'Y (V0370M)(LINEAGE TDWV-H810F)(HOCF)	1
19	SIDE SHIELDING(SSCC 0.8)(VX420M)	1
20	SIDE JACK PLATE VIZO V1320M	1
21	MAIN SHIELDING(SPE 10*10*20,mm)	1
22	GASKET BLOCK (100*10*20,mm)	1
23	REAR COVER (48S RF/ 1520.3)(V0370M) ASS'Y	1
24	SPACER SUPPORT MC-8(GW46, HDV)	2
25	BASE NECK(V032L)48S 94-118/-SD-0150.1520.3) ASS'Y	1
26	BASE (V032L)48S 94-118/-SD-0150.1520.3)ASS'Y	1
27	MAC.SCREEN HANDLE M4.09(L Pinning)	1
28	ROBER(SILICON)/12*9*5.3)(NATURAL)	2
29	NH A2001-4/A2001-4 1061#28 450mm	1
30	NH A2006-2X10P/A2543-12*6F 1007#24 500mm	1
31	NH A2301-4/172BS1+1412BS 100# #24 1280/580mm+core 1	1
32	NH PK524020P5P/PD04320 2027#30 450mm+CLAMP Rev1	1
33	ACETATE CLOTH TAPE ( 纖維粘着帶 ) 20*40mm	13
34	ACETATE CLOTH TAPE ( 纖維粘着帶 ) 40*80mm	2
35	MAC. SCREEN-AMSW #4-40*5.0L,Ni	2
36	TAP. SCREEN-TP #4.0*12.0L, BLK-Ni	20
37	TAP. SCREEN-TP #4.0*16.0L, BLK-Ni	8
38	TAP. SCREEN-TP #4.0*26.0L, BLK-Ni	4
39	TAP. SCREEN-TRF #4.0*12.0L,Ni	8
40	MAC. SCREEN-WAF M4.0*5.0,BLK,Ni,NiYTOK	16
41	MAC. SCREEN-WAF M3.0*5.0L W-B3,BLK,Ni,NiYTOK	27
42	GASKET BLOCK (10W*5.5H*30,mm)	1
43	SHIELDING AL TAPE(50*4*0.40)	5
44	USB CONNECTOR COVER(USB-C-2)	1
45		1

VIZIO VO37QM-LGD		9642-3505-0053	
GREEN		FRONT VIEW	
